



INSTRUCTIONS FOR FLOOR PUMPS

SIMPLE VALVE MODELS



- 1** If inflating a tire with a Presta Valve, open the tip of valve before inflating tire. If using Schrader Valve, skip this step.
- 2** Clear valve before connecting pump head by quickly depressing tip of Presta Valve to release a little air. For Schrader Valve, depress the inner valve core.
- 3** Push pump head firmly onto valve as far as it will go.
- 4** Lift lever to lock pump head on to valve.
- 5** Grasp pump handle with both hands.
- 6** Lift handle up to fully extend plunger, then push down completely.
- 7** Inflate to the desired pressure as indicated on sidewall of tire.
- 8** After inflating, push lever down to the unlocked position and pull pump head from the valve. A small amount of air may escape as pump head is disengaged. This is insignificant and will not affect the actual tier pressure.
- 9** For Presta Valve users: close tip of Presta Valve when finished.

