



TIRE SEALANT RIM TAPE INSTRUCTIONS

Good for 2 wheels with 2 layers.
High quality light rim tape for preventing air/sealant leakage through spoke holes.

INSTRUCTIONS:

- Clean rims, using rag, moistened with alcohol.
- Apply tape on rim by firmly pulling and placing the tape along the rim.
- Squeeze trapped air bubbles out using soft rag.
- Start applying 10cm before valve hole and finish 10cm after.
- For best results apply another layer on top of the first one.

We always recommend using the rubber rim strip over the rim tape when converting to tubeless system.