

## INSTALLATION INSTRUCTIONS



Insert one side or bead of tire into rim.



Place partially inflated tube inside tire casing and straightened valve stem.



Starting at the valve stem, push second bead onto rim.



Inflate tire to recommended pressure and test beads for integrity.