

# THUNDER BLAST TAIL LIGHT

## THUNDER BLAST TAIL LIGHT

### UTLA-7

MODE	LUMEN	RUNTIME
High	40	up to 2.25 hrs
High Flash	40	up to 4.00 hrs
Low	10	up to 7.75 hrs
Low Flash	10	up to 15.25 hrs
WEIGHT		58g with bracket
CHARGE TIME		4 hrs by USB wall charger* *Charge time dependent on computer USB current
DURÉE CONFIGURATION		Jusqu'à 15.25 heures Modes hautes, haute, flash, faible et faible flash.
DAUER KONFIGURATION		Bis zu 15.25 Stunden Modi hoch, hoher flash, niedrig, und niedrige Blitz.
DURACIÓN CONFIGURACION		Hasta 15.25 horas Modos alto, alto flash, baja y baja flash.



### BLAST AUDIBLE WARNING

#### ATTENTION

##### How It Works

- Emits a loud (85 Decibel) signal when your light battery reaches 10 minutes of runtime in that specific mode.
- When the battery reaches 10 minutes of runtime, in its current mode, the light will emit a long beep followed immediately by 2 short beeps. Sound will continue every minute unless mode is changed.
- When the power button is pressed it will put the light in the next longest running mode & it will restart the battery low alert until 10 minutes of runtime in that mode is reached. Repeat as necessary. Example: Going from highest mode to lowest mode at first beep could extend runtime up to 5 times.\*
- Light will emit beep sound repeatedly when last minute of runtime in the current mode is reached.

**Batteries may be discharged due to display testing. Please charge before initial use.**

**SERFAS, INC.**  
2333 W. Utopia Rd.  
Phoenix, AZ 85027  
**serfas.com**



#### WARNING

This product may contain a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.

#### CHARGING UTLA-7:

1. Please fully charge before first time use (approx. 3-6 hrs).
2. Pull rubber cover underneath light to reveal mini USB port.
3. Plug mini USB cable into light port and other end to wall adapter or computer USB port.
4. Charge Indicator is located in the on/off switch.
5. Charging = Blinking / Complete Charge = Solid
6. Light will beep to indicate full charge.

#### OPERATING FUNCTIONS

Turn On: Press power button repeatedly to cycle modes.

Turn Off: Hold power button down for one second.

Memory: When turned back on light goes into same mode as when turned off.

#### Care

- \*Make sure to clean the dust and dirt on the light with soft damp cloth after every ride.
- \*Water resistant is for rain water only. Do not submerge the battery or the whole light into water when cleaning.

#### Warranty

Serfas warrants to the original purchaser of this product that the product is free from defects in material and workmanship for the lifetime of the product. This warranty does not apply to damage due to heat, physical damage (crashing) resulting from abuse, neglect, improper repair, improper fit, or alterations of the fixture. This warranty is in lieu of all other agreements and warranties, general or specific, express or implied and no representative or person is authorized to assume liability on behalf of Serfas in connection with the sale and use of this product.

Serfas reserves the right to request the return of any product submitted for warranty consideration. All customers should contact Serfas directly for warranty service.

To make a claim, please e-mail [warranty@serfas.com](mailto:warranty@serfas.com).