



## UTL-6 Specification Chart

Mode	Lumen	Runtime [hrs:min]
High Steady	30	Up to 1:30
Low Steady	9	Up to 4:00
High Flash	...	Up to 2:30
Low Flash	...	Up to 8:00
<b>Weight (grams)</b>		50g With Bracket
<b>Charge Time</b>		4 Hours By USB Charger *

\* Charge time dependent on computer USB current.

- 1 USB Charging Cords and 1 Short Mounting Straps.

**Durée:** Jusqu'à 8 heures  
**Configuration:** Élevé, moyen, faible, clignotant

Voir à l'intérieur de la boîte pour obtenir des instructions supplémentaires.

**Dauer:** Bis zu 8 Stunden  
**Konfiguration:** Hoch, Mittel oder niedrig, blinken

Finden Sie im Strafraum weitere Anweisungen.

**Duración:** Hasta 8 horas  
**Configuración:** Alto, medio, bajo, intermitente

Ver dentro de la caja para instrucciones adicionales.

### CHARGING UTL-6:

1. Please fully charge before first time use (approx. 3-6 hrs).
2. Pull rubber cover underneath light to reveal mini USB port.
3. Plug mini USB cable into light port and other end to wall adapter or computer USB port.
4. Charge Indicator is located beside the on/off switch.
5. Charging = Blinking / Complete Charge = Solid

### OPERATING FUNCTIONS

Solid Modes: Press power button to cycle solid modes.  
Blinking Mode: Hold power button down for two seconds.  
Turn Off: Hold power button down for one second.



**Batteries may be discharged due to display testing. Please charge before initial use.**

#### International Consumers:

Please contact your local distributors for warranty guidelines as they may vary by country. List of distributors can be found at [serfas.com/sitepages/view/8](http://serfas.com/sitepages/view/8).

**SERFAS, INC.**  
2333 W. Utopia Rd.  
Phoenix, AZ 85027  
Serfas.com

